

1 Installing the Aplio/PRO


Simply follow the directions in the diagram below. If you have an answering machine, place it between your Aplio/PRO and your regular phone. Make sure your phone is in tone mode and is approved.

The Ethernet plug on your Aplio/PRO needs to be connected to a 10 Base T network (10 Mb per second). Ask your Network Administrator or Internet Provider to do so.

Optional:

- If you want to connect existing networked devices (as a PC) to the same Ethernet jack, simply remove the existing Ethernet cord of the additional device and plug it into the jack marked 'ETHERNET IN' on the back of the Aplio/PRO. Then, using the supplied cable, reconnect your device to the Aplio/PRO 'ETHERNET OUT' (Your Aplio/PRO must be switched on to power the jack marked 'ETHERNET OUT')

- If you want to use the traditional phone network with your phone (PSTN): Plug one end of the phone cord that came in your package into the jack marked 'LINE' on the back of the Aplio/PRO. Plug the other end of the phone cord into the PSTN wall-jack. Connection to PSTN is allowed only in countries where Aplio/PRO is PSTN approved.

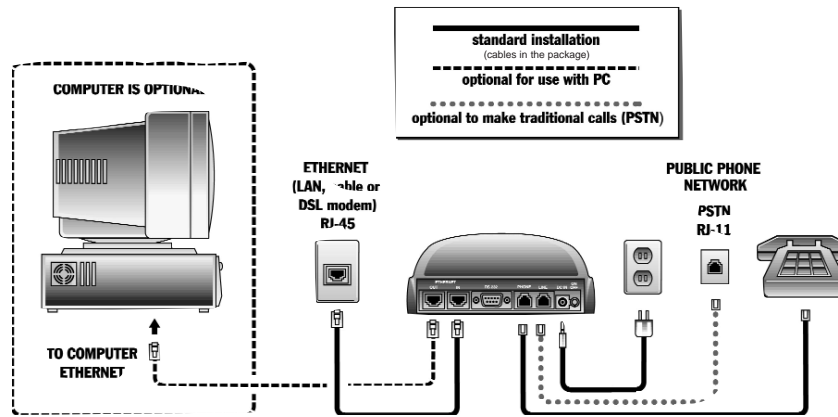

Note: Connection to the PSTN may vary according to countries.

2 Configuring the Aplio/PRO

Press the On/Off button, located at the right of the plug marked DC IN, to turn on the Aplio/PRO. The buttons should illuminate briefly, followed (in about 1 to 2 minutes) by a series of beeps. After the beeps, pick up your phone receiver to check for a dial tone.

Note: If your Aplio/PRO is not connected to the traditional phone network (PSTN), you will not hear a dial tone when you pick up the phone at this stage. Pick up the phone and press **APLIO** twice. You will hear the voice prompts. To deactivate PSTN: press **1 2** on your phone keypad, then **0 2**. When prompted, press **1** to confirm.

Note: To change the language of the voice prompts, pick up the phone, press **APLIO** twice, then **1 2 3** the language number (1/FRENCH, 2/English, 3/ Japanese, 4/Spanish, 5/Italian, 6/Chinese, 9/Portuguese, 10/German, 11/Hebrew, 12/Czech, 14/Greek, 15/Korean). When prompted press **1** to confirm. Then if you do not hear voice prompts if the selected language, press **1 2 3 4**.

If after the beeps, the **APLIO** button is lit and the **APLIO** button does not blink, then you can use immediately your Aplio/PRO: proceed to 3- Making a Call. Otherwise go through the two following steps.

Step 1: After the beeps, if the **APLIO button blinks and the **APLIO** button does not blink**

(otherwise, proceed to step 2)

Ask your Network Administrator or Internet Provider if you use a DHCP server.

a. If you use a DHCP server, the DHCP server should assign automatically an IP address to your Aplio/PRO. Ask your Network Administrator or Internet Provider to check if the DHCP server works properly. Then turn off and on your Aplio/PRO to see if that fixes the problem.

b. If you do not use a DHCP server:

- Ask your Network Administrator or Internet Provider to give you a static IP address for your Aplio/PRO, the static IP address of the subnet mask and the static IP address of the network gateway.
- Enter configuration menu : pick up the phone and press **APLIO** twice. You will hear the voice prompts.
- Deactivate DHCP protocol: press **1 2** on your phone keypad, then **0 2**. When prompted, press **1** to confirm.
- Enter the static IP address of your Aplio/PRO: press **2 2** on your phone keypad then enter your static IP address. It is composed of four groups of digits.

To separate 2 groups of digits, dial **2 2** on your phone keypad.

Example : to enter the IP address 123.21.31.12, dial

1 2 3 * * 2 1 * * 3 1 * * 1 2 .

Press **2** at the end of the IP address. When prompted, press **1** to confirm.

• Enter the static IP address of the subnet mask: press **3 2** on your phone keypad then enter the static IP address of the subnet mask. It is composed of four groups of digits. To separate 2 groups of digits, dial **2 2** on your phone keypad. Press **2** at the end of the static IP address of the subnet mask. When prompted, press **1** to confirm.

• Enter the static IP address of the network gateway: press **4 2** on your phone keypad then enter the static IP address of the network gateway. It is composed of four groups of digits. To separate 2 groups of digits, dial **2 2** on your phone keypad. Press **2** at the end of the static IP address of the network gateway. When prompted, press **1** to confirm.

You can now hang-up your phone, then proceed to step 2.

Step 2: After the beeps, if the **APLIO button blinks and the **APLIO** blinks also** (Otherwise, you are ready to use your Aplio/PRO : proceed to 3-Making a Call)

In most cases, a firewall forbids your Aplio/PRO to receive from the signaling port (default 8740) which is a port used by the Aplio protocol. In that case, ask your Network Administrator or Internet Provider to open this port on your side. Then turn off and on your Aplio/PRO to see if that fixes the problem.

For more information check Signaling port in Aplio/PRO User's Manual, Chapter 4 on www.aplio.com.

Then you are ready to use your Aplio/PRO : proceed to 3- Making a Call.

Note : for the configuration, you may use the phone keypad, a web browser or a terminal connected to the serial port (as a PC or a PDA). To do so, check Aplio/PRO User's Manual, Chapter 4 on www.aplio.com.

3 Making a call

Calling an Aplio/PRO

1. Pick up your phone receiver (you will hear the usual phone tone)

Note : If your Aplio/PRO is not connected to PSTN (Public Phone Network) go directly to step 3.

2. Press the **APLIO** button (there will be a special tone)

3. Dial the Aplio ID of the person you want to call. The Aplio ID is located under the **APLIO** (without the leading zeros). You will then hear the ringing tone on the receiving side. When the other party answers, speak normally and hang up when finished.

Note : For faster call establishment, dial **2** at the end of the Aplio ID.

Calling an Aplio/Phone

If the Aplio/Phone is in 100% Free Mode

It is exactly as calling an Aplio/PRO.

If the Aplio/Phone is in standard mode

Tell the other party to set the receiving Aplio/PHONE to 100% Free Mode. Once the

receiving Aplio/PHONE is in 100% Free Mode, it is exactly as calling an Aplio/PRO.

You may also use the Wake-up call feature of the remote Aplio/PHONE (if activated in the called Aplio/PHONE): dial the usual telephone number of the remote Aplio/Phone and let ring less than the number of rings defined for the Wake-up Call then Hang up. One minute after, the receiving Aplio/Phone is in 100% Free Mode. Then it is exactly as calling an Aplio/PRO.

Making a normal phone call

If you are connected to the traditional phone network, you can also call any usual PSTN number. Since you use the traditional phone network, you are charged the traditional call price.

To do so, pick up your phone receiver and dial the phone number of the person you want to call.

Check the Aplio Web site at www.aplio.com for updates and special offers.

ENGLISH

